



Sonosite PX Stand and Accessory Assembly Instructions




Inside the boxes	2
Main box	2
Platform box	2
System box	2
Box A	
Box B	
Printer box	
Unpack the boxes	
Attach the storage tray	4
Secure the column	5
Remove packaging	5
Remove packaging	6
Install covers over power receptacles	6
Attach the storage container, drawer, and cord wrap hooks	7
Attach the gel and wipe holders	7
Attach the cable management system	8
Raise the column	8
Install the platform	9
Connect the stand to power	10
Install the printer	11

Inside the boxes

Main box

Column and base

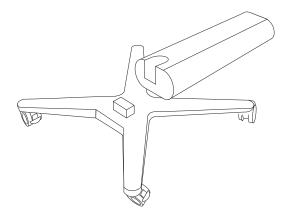

Platform box

Platform



System box

Power cord



Box A

Magnetic bit driver



3 mm, 4 mm, and 5 mm hex bits (1 each)



#1 Phillips bit



M4 x 20 mm hexhead screws (2)




M6 x18 mm hexhead screws (4)




M3 x 8 mm Phillipshead screws (4)



Storage tray

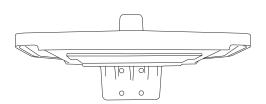


Storage container with power cord wrap

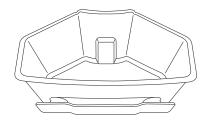


Box B

Gel bottle holder

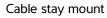

Wipe holder




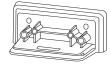




Bottom cover

Lockable storage drawer

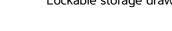





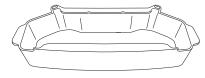

Cable management system mounting bracket

Cable management system cover

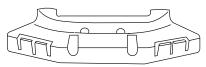

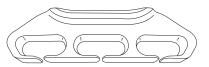

Rear base cover

Power cord wrap hook

Outlet cover









Printer box


Printer and user documentation

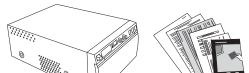

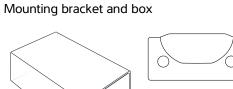

Prying tool

M6 x18 mm hex-head screws (4)

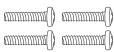


Unpack the boxes


STEP 1

Remove the upper part of the box.

STEP 2

Unpack the inner boxes and remove the cardboard packing material.

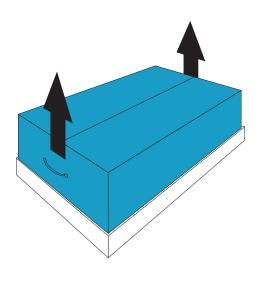


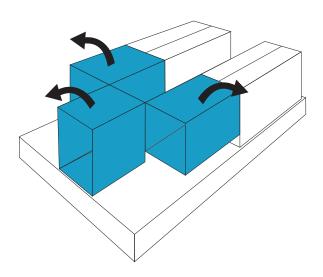

Attach the storage tray

STEP 3


Insert the 5 mm hex bit into the bit driver and use four hex-head 18 mm screws to attach the tray to the back of the stand column.

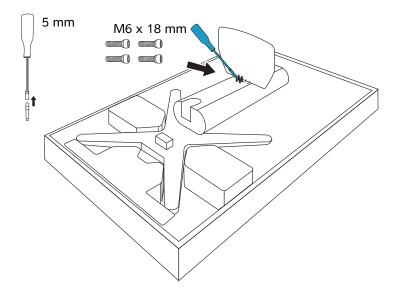

Secure the column

STEP 4


Raise the column upright.

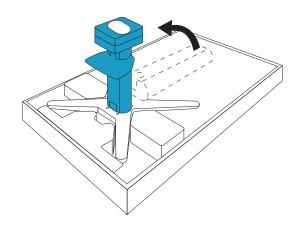

Remove packaging


STEP 6

Remove the packing foam from on and around the stand.

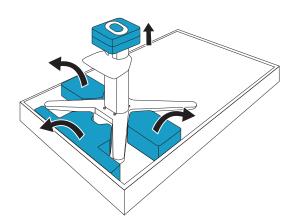


STEP 5

Use the bit driver with the 5 mm bit to tighten the four screws on the base of the column.

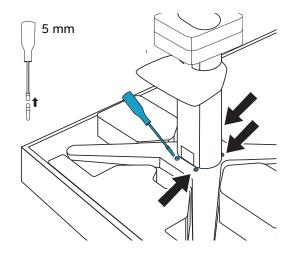

STEP 7


Cut the tape holding the front flap of the box up and lower the flap to the floor.

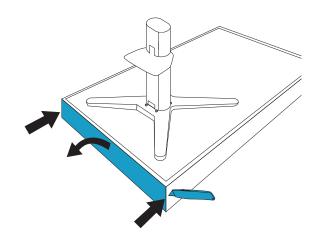

Remove packaging


STEP 8

Roll the stand out of the packing box.

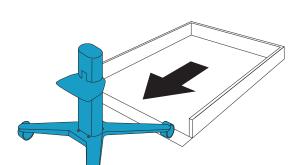

STEP 9

Lock the wheels closest to the edge of the box.

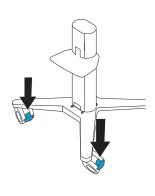


Install covers over power receptacles

STEP 10


Fit the rear base cover around the stand column above the power plugs, then press the cover straight down with equal pressure on both sides until it snaps into place.


STEP 11

If you are not installing a printer, use the outlet cover to block the printer power outlet.

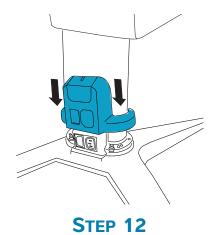

Install the cover over the power cables.

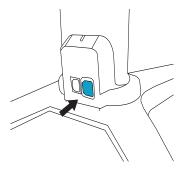

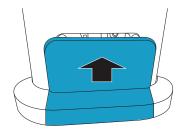



Attach the storage container, drawer, and cord wrap hooks

STEP 13

STEP 14


Slide the storage container down over the tongue of the storage tray until it is resting on the tray. Slide the drawer into the slots on the underside of the tray.

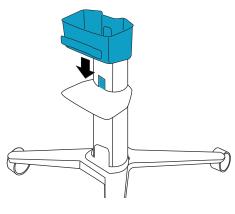

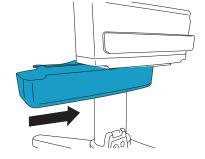

STEP 15

Slip the hook over the edge of the cord wrap on the front of the storage container.

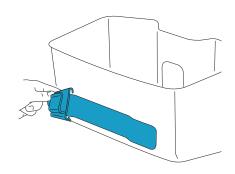

Attach the gel and wipe holders


STEP 16

Slide the gel bottle holder down onto one of the mounting brackets on either side of the column.



Slide the wipe holder down onto one of the mounting brackets on either side of the column.




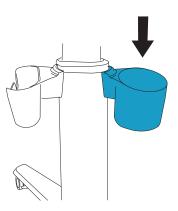

Attach the cable management system


STEP 18

Attach the cable stay mount to the column with two screws.

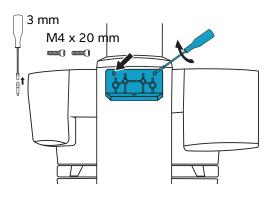

STEP 20


Attach the cable management bracket to the column using the bit driver with the Phillips bit and the two 8 mm screws.

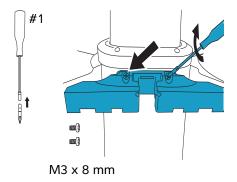

Raise the column


STEP 22

Remove the two hook and loop shipping straps immobilizing the foot pedal.

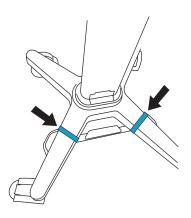


STEP 19

Snap the cable management bracket into position on top of the battery pack.

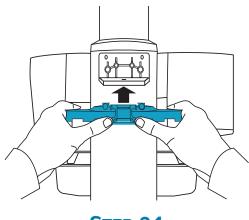

STEP 21

Slide the cable management cover down over the top of the cable management bracket until is snaps into place.

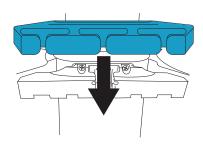


1

WARNING To avoid the column rising too quickly, place your hand on top.

STEP 23


Press the foot pedal to raise the inner column partway.

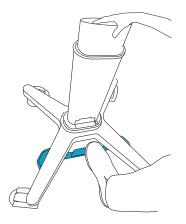

Install the platform


STEP 24

Insert the platform pedestal into the inner stand column

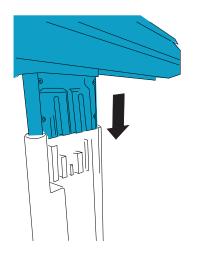


STEP 25

Use the bit driver with the 4 mm bit to tighten the four screws on the platform.

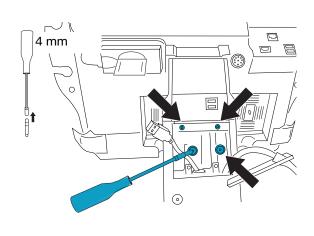


STEP 26

Connect the USB cable in the inner column to the USB port inside the platform.

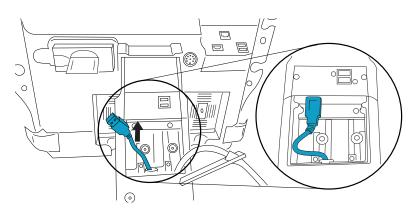


STEP 27

Slide the power cable grommet into the column cover.

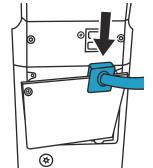


STEP 28

Attach the column cover to the stand by tightening the two pre-installed screws with the bit driver and the Philips bit.

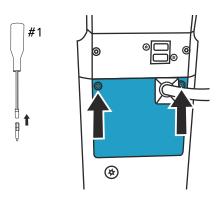

STEP 29

Connect the column power cable to the platform by pushing it into place and screwing it into the connector. Tug gently to make sure it is secure.

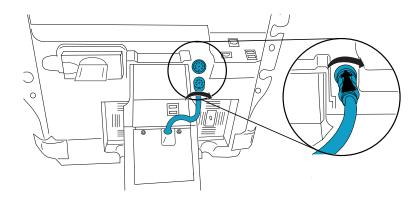


Connect the stand to power


STEP 30

Connect AC power cord from the system box to the base of the stand.




Connect the AC power cord to a hospital-grade AC mains outlet.

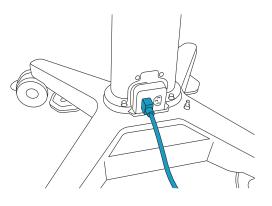


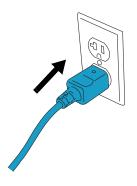

STEP 32

Make sure that the power status lights located next to the column power cable and on the base of the stand are on.

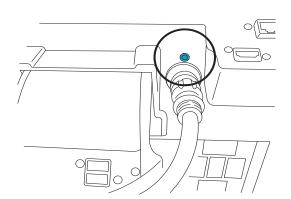


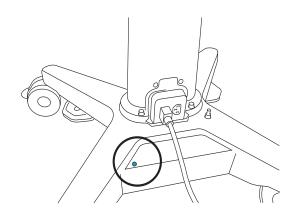

Install the printer


STEP 33

Unplug the stand from the wall.

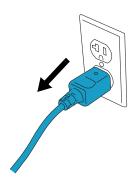


STEP 35

Use the bit driver with the Phillips bit to tighten the four screws on the bottom of the mounting box.

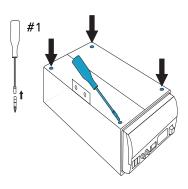


STEP 37

Use the bit driver with the 5 mm bit and the hexhead 12 mm screws to attach the printer mounting bracket to the stand.

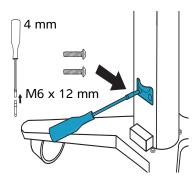


STEP 34

Slide the printer into the mounting box.

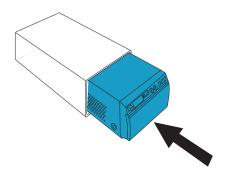


STEP 36

Remove the cover on the back of the stand column.

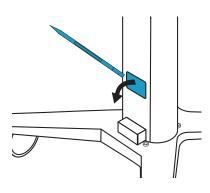


STEP 38

Slide the lip of the mounting box down onto the mounting bracket.

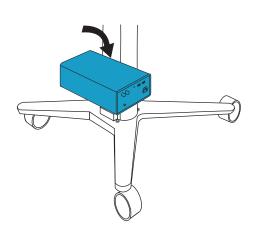


STEP 39

Tighten the screws located under the printer.

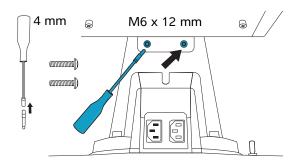


STEP 41

Connect the USB cable to the printer, and run the cable through the cable holder.

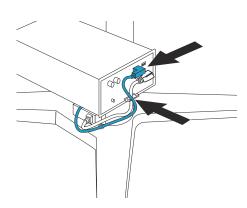


STEP 43

Plug the USB cable into the stand.

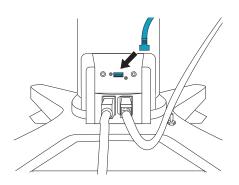


STEP 40

Connect the AC cable to the printer, run the cable through the cable holder, and plug the cable into the stand.

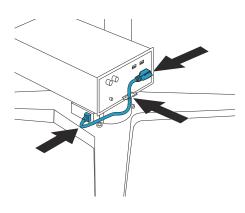


STEP 42

Lift off the USB port cover.

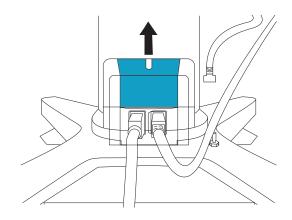

STEP 44

Slide the USB cable into the slot in the USB cover and then replace the USB port cover.

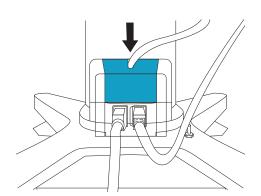



STEP 45

Attach the printer cover.


STEP 46

Connect the AC power cord to a hospital-grade AC mains outlet.

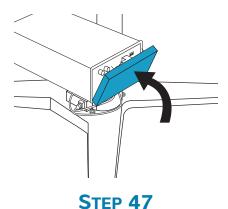

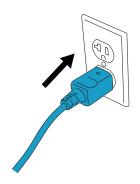

Push the power button to turn the printer on.

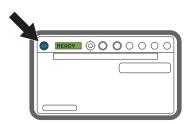



WARNING To avoid the risk of a shock hazard, do not plug the power cord into a multiple portable socket outlet (MPSO) or into an extension cord.



Cautions

- ▶ To avoid damaging the system, use only accessories and peripherals recommended by FUJFILM Sonosite.
- ▶ Federal (United States) law restricts this device to sale by or on the order of a physician.

SONOSITE and the SONOSITE logo are trademarks and registered trademarks of FUJIFILM Sonosite, Inc., in various jurisdictions. FUJIFILM is a registered trademark of FUJIFILM Corporation. Value from Innovation is a trademark of FUJIFILM Holdings America Corporation.

All other trademarks are the property of their respective owners.

Published April 2020

Copyright © 2020 FUJIFILM Sonosite, Inc. All rights reserved.

M	anufacturer
	anianac tarei

FUJIFILM Sonosite, Inc. 21919 30th Drive SE Bothell, WA 98021 USA T: 1-888-482-9449 or 1-425-951-1200

F: 1-425-951-1201

EC Authorized Representative

FUJIFILM Sonosite B.V. Joop Geesinkweg 140 1114 AB Amsterdam, The Netherlands

Australia Sponsor

FUJIFILM Sonosite Australasia Pty Ltd 114 Old Pittwater Road BROOKVALE, NSW, 2100 Australia



P21940-02

